


Projet :	Date :
No Cat. :	Type :
Notes :	Volts :

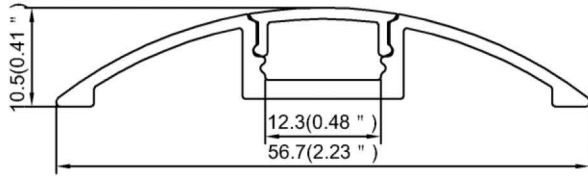


NTALB-21




NTALB-21-embouts

Steps of Installation


1. Drill the holes for mounting

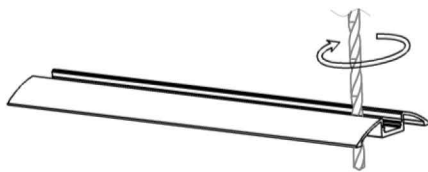


2. Mounting the profile on the wall

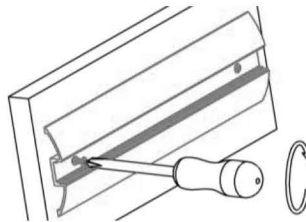


3. Stick the led strips

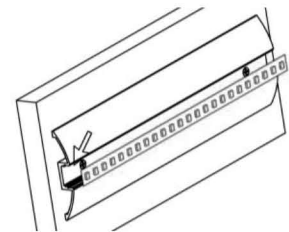

4. Click the diffused cover

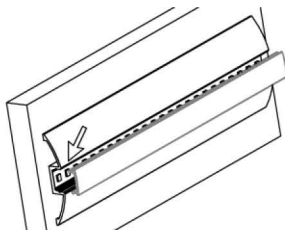

5. Click the end caps

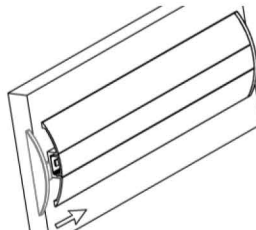

6. Installation completed

